

# RC32S 5.8ghz 32CH Scan Receiver

 

## 1. Working Frequency:

5705	5685	5665	5645	5885	5905	5925	5945
5733	5752	5771	5790	5809	5828	5847	5866
5740	5760	5780	5800	5820	5840	5860	5880
5865	5845	5825	5805	5785	5765	5745	5725

## 2. Features:

- 32 Channels Digital Display
- 1 button Auto Search all 32 channels
- 2 Channel AV output

## 3. Operation and Figures

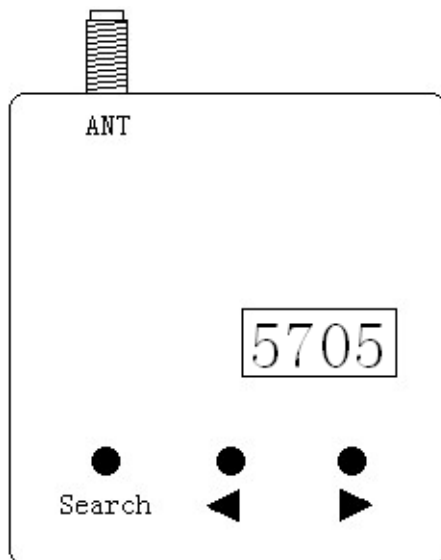

- Screw the Antenna
- Plug the AV cable to VIDEO1 or VIDEO2
- Connect the power adapter or battery to DC 12V (center positive) and It'll display 5705
- Press Button "Search" to start auto search downward all 32 channels from 5705. It's will stop when there is signals and press the button again to continue searching.
- Press Button ◀ to decrease the frequency and ▶ to increase

**Notice:** Please search again if the image is not good as there is string frequency within 5.8ghz frequency.