RC32S 说明书


1. 工作频率:

5705	5685	5665	5645	5885	5905	5925	5945
5733	5752	5771	5790	5809	5828	5847	5866
5740	5760	5780	5800	5820	5840	5860	5880
5865	5845	5825	5805	5785	5765	5745	5725

2. Features:

- 32 个频率数字显示
- 一键自动扫描频率 32 个频点
- 两组 A/V 信号输出

3. Operation and Figures

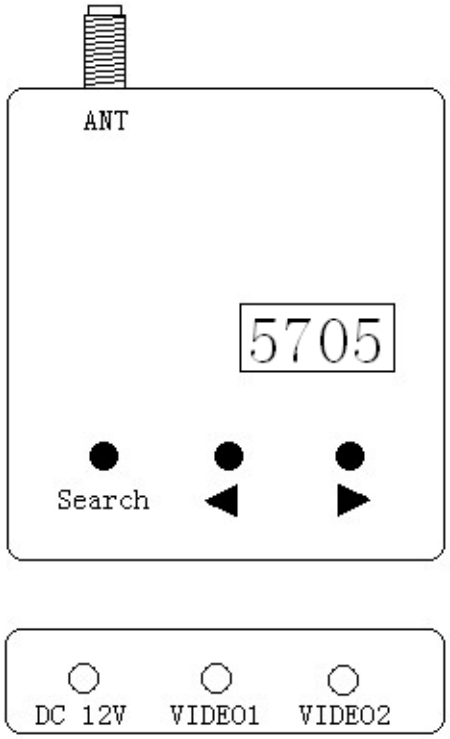

- 将配置好的天线接入 ANT 位置
- 将配置好的 A/V 线插入 VIDEO1/VIDEO2 任意一个位置
- 将电源适配器或专用电池插入 DC 12V 位置，此时，产品数码管会显示 5705 字样，但无图像输出
- 按一下开关 Search 自动扫描，自动从 5705 开始往后扫描，共 32 个频率，（扫描过程中，可能出现频率接近或别人正在使用的其它频率时停止，再按一下，继续往下扫描，找到自己使用的频率）
- 按一下◀ 是频率后退，▶是频率前进（频率会从以上工作频率按顺序后退或前进）

RC32S Manual


1. Working Frequency:

5705	5685	5665	5645	5885	5905	5925	5945
5733	5752	5771	5790	5809	5828	5847	5866
5740	5760	5780	5800	5820	5840	5860	5880
5865	5845	5825	5805	5785	5765	5745	5725

2. Features:

- 32 Channels Digital Display
- 1 button Auto Search all 32 channels
- 2 Channel AV output

3. Operation and Figures

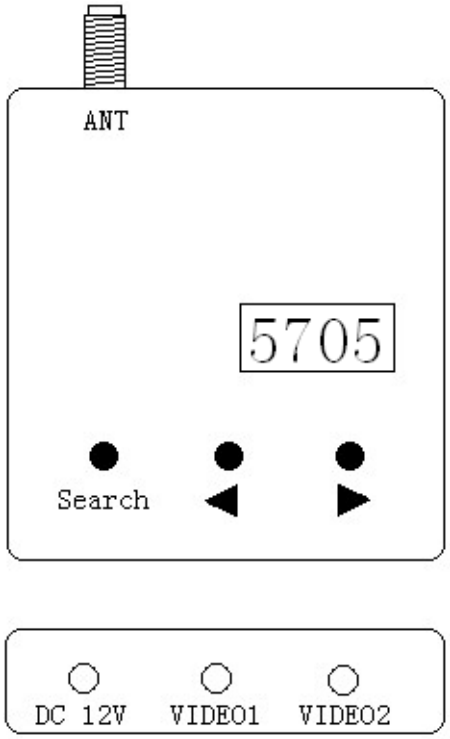

- Screw the Antenna
- Plug the AV cable to VIDEO1 or VIDEO2
- Connect the power adapter or battery to DC 12V (center positive) and It'll display 5705
- Press Button "Search" to start auto search downward all 32 channels from 5705.It's will stop when there is signals and press the button again to continue searching.
- Press Button ◀ to decrease the frequency and ▶ to increase