
# Alloy Transmitter

Ver 1.5

## Contents

Product picture:	3
Features:	4
Key function:	
Frequency:	
Lock the KEY:	
Unlock the KEY:	
Change Frequency:	
Accessories:	
Installation:	

### **Product picture:**

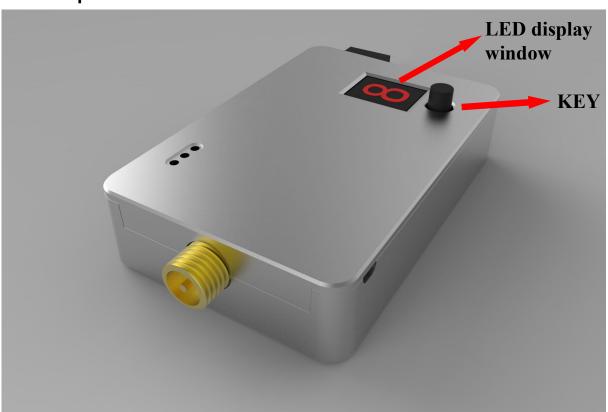




Video: Video input

+: Power positive (6-28V)

-: Ground(power negative)

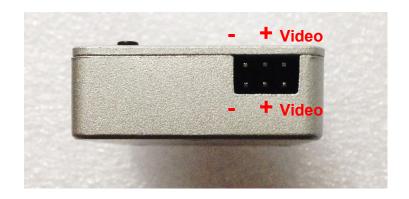

#### Features:

	Power	600mW		
Dorformonoo	Voltage	6V - 28 V DC		
Performance	Current	300mA @12V		
	Channel number	32		
Considerations	Size	51×34×12 MM		
Specifications	Weight	40g		

#### **Key function:**

Name	Operation	Function		
	Press the key twice in 2 seconds	Unlock key function		
KEY	Press the key once	Switch channel, from 1 to 8		
	Long-press the key for 2 seconds	Switch channel group, form A to D		

#### Frequency:

A1: 5.645G	B1:	5.740G	C1:	5.725G	D1:	5.733G
A2: 5.665G	B2:	5.760G	C2:	5.745G	D2:	5.752G
A3: 5.685G	B3:	5.780G	C3:	5.765G	D3:	5.771G
A4: 5.705G	B4:	5.800G	C4:	5.785G	D4:	5.790G
A5: 5.885G	B5:	5.820G	C5:	5.805G	D5:	5.809G
A6: 5.905G	B6:	5.840G	C6:	5.825G	D6:	5.828G
A7: 5.925G	B7:	5.860G	C7:	5.845G	D7:	5.847G
A8: 5.945G	B8:	5.860G	C8:	5.865G	D8:	5.866G

#### Lock the KEY:

The key will be locked in order to avoid some misoperations. In key-locked mode, current frequency group and frequency will be displayed in the LED window with a cycle time of 5 seconds. When the key has been released for 5 seconds, it will be locked automatically, and the LED display window will flash twice to remind us.

#### Unlock the KEY:

Press the key twice in 2 seconds, the key will be unlocked. The LED will flash twice to remind us. When the key is unlocked, current frequency group and frequency will be displayed in the LED window with a cycle time of 1.5 seconds. When connected to power, or released for 5 seconds, the key will be locked automatically.

#### **Change Frequency:**

First unlock the key, and then you can change channels and groups.

#### **Accessories:**

Mushroom antenna	1pcs
Cable	2pcs (20cm)



White: Video input

**Red:** Power positive (6-28V) **Black:** Ground(power negative)

#### Installation:

The antenna should be fixed vertically to the machine for good performance.

